

# Nurse Call System

The WTK Nurse Call System is designed to provide nursing services to modern application.

Advanced model with LCD touchscreen monitor system or with conventional dial pad system.



Model WT07001L Nurse Console  
LCD Touchscreen

## Description

It is an important communication link between patients and nursing staff and being designed to meet various kind of visual and tone signal needed for patient call. It provides a two-way nurse to patient speech for instant communication between nurse and patient or other staff.



Model WT07001 Nurse Console

With easy to use numeric key pad, the nursing staff can access any call point inside the system to open up a two-way communication with the calling point.

It is a smart system where the attendant will automatically answer the highest priority call or any call intended to make by inputting the room and bed number through key pad.

Main Supporting System will be patient panel, hand unit, emergency panel, reset panel, overdoor indicator (Tri-Color) and pull cord system



Patient Panel & Hand Unit



Emergency Panel & Reset Panel




Overdoor Light



Corridor Display

## Innovative Design in Medical Engineering

# TYPICAL LAYOUT OF NURSE CALL SYSTEM

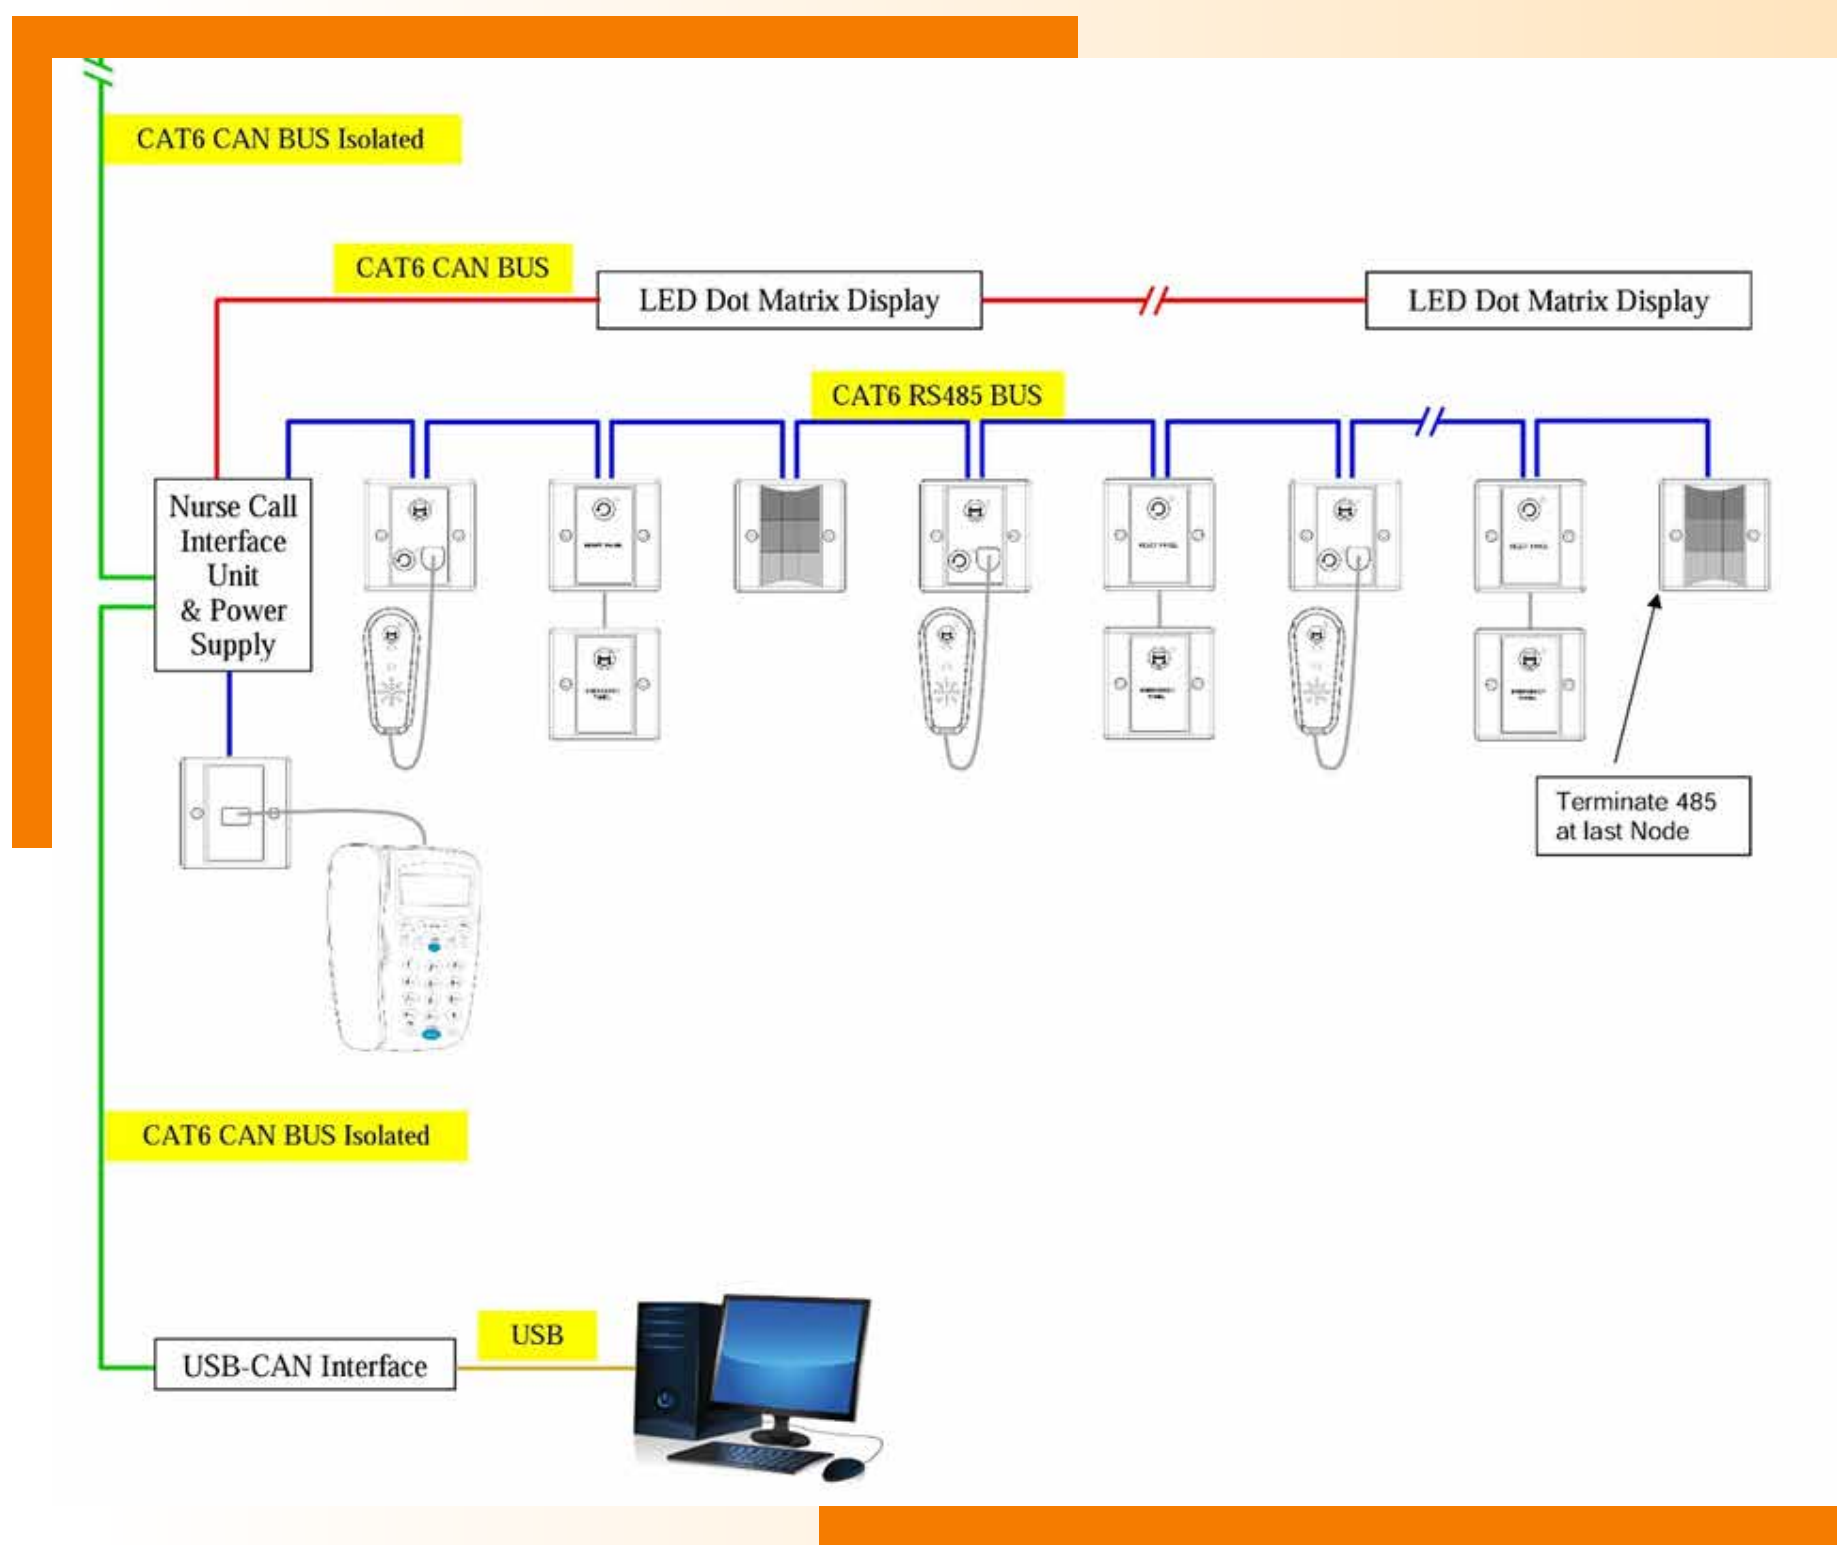

## Technical Specification

HTM 2007 – Electrical Supply and Services Distribution  
HTM 2020/2021 – Electrical Safety codes for High & Low Voltage

Designation : Nurse Call System, 2 Way Speech & networking system  
Power Type : Input 230 VAC. Low voltage design 12 VDC  
Room & Bed : Assignment up to 255 locations per console  
Config : Default bed ( 001 ) or room assignment ( ICU 001)

## MODEL NUMBER

WT07001	Nurse Console	WT07006	Pull Cord
WT07001L	Nurse Console LCD Touchscreen type	WT07007	Bathroom Reset Panel
WT07002	Patient Panel	WT07008	Dot Matrix Corridor Display
WT07003	Hand Unit	WT07009	Interface Unit (for Networking)
WT07004	Room Indicator	WT07010	Workstation c/w printer
WT07005	Emergency Call		

