

Surgical Scrub Sink

The WTK scrub sink is made to highest hospital quality that complies to international standards.
It is made of high-grade SS304 stainless steel with satin polish finish.
Dupont Material is available upon request.



Dupont Material Construction Model

Description

All the LV electrical components are housed in a junction box and the fascia is 24 VAC operated & comply with LV requirement.
The bowl is constructed in a way that will eliminate back splash of water and the drainage is carefully designed to avoid any overflowing.

With its time out control, WTK scrub sink is able to provide the convenience to the user and also as a part of water saving concept.

WTK is offering the following features as standard & optional package:


1. Thermostatic mixing valve controls the temperature of hot/cold water
2. Kick panel using knee operation
3. Foot valve using foot operation
4. Single, double and triple bay as standard option
5. By pass system during power failure or maintenance period
6. Elbow operated taps
7. Anti-splash scrub sink design for the comfort of users
8. Optional accessories such as sensor soap dispenser, scrub dispenser etc.



Robust Construction with electronics control

Innovative Design in Medical Engineering

TYPICAL LAYOUT OF SURGICAL SCRUB SINK

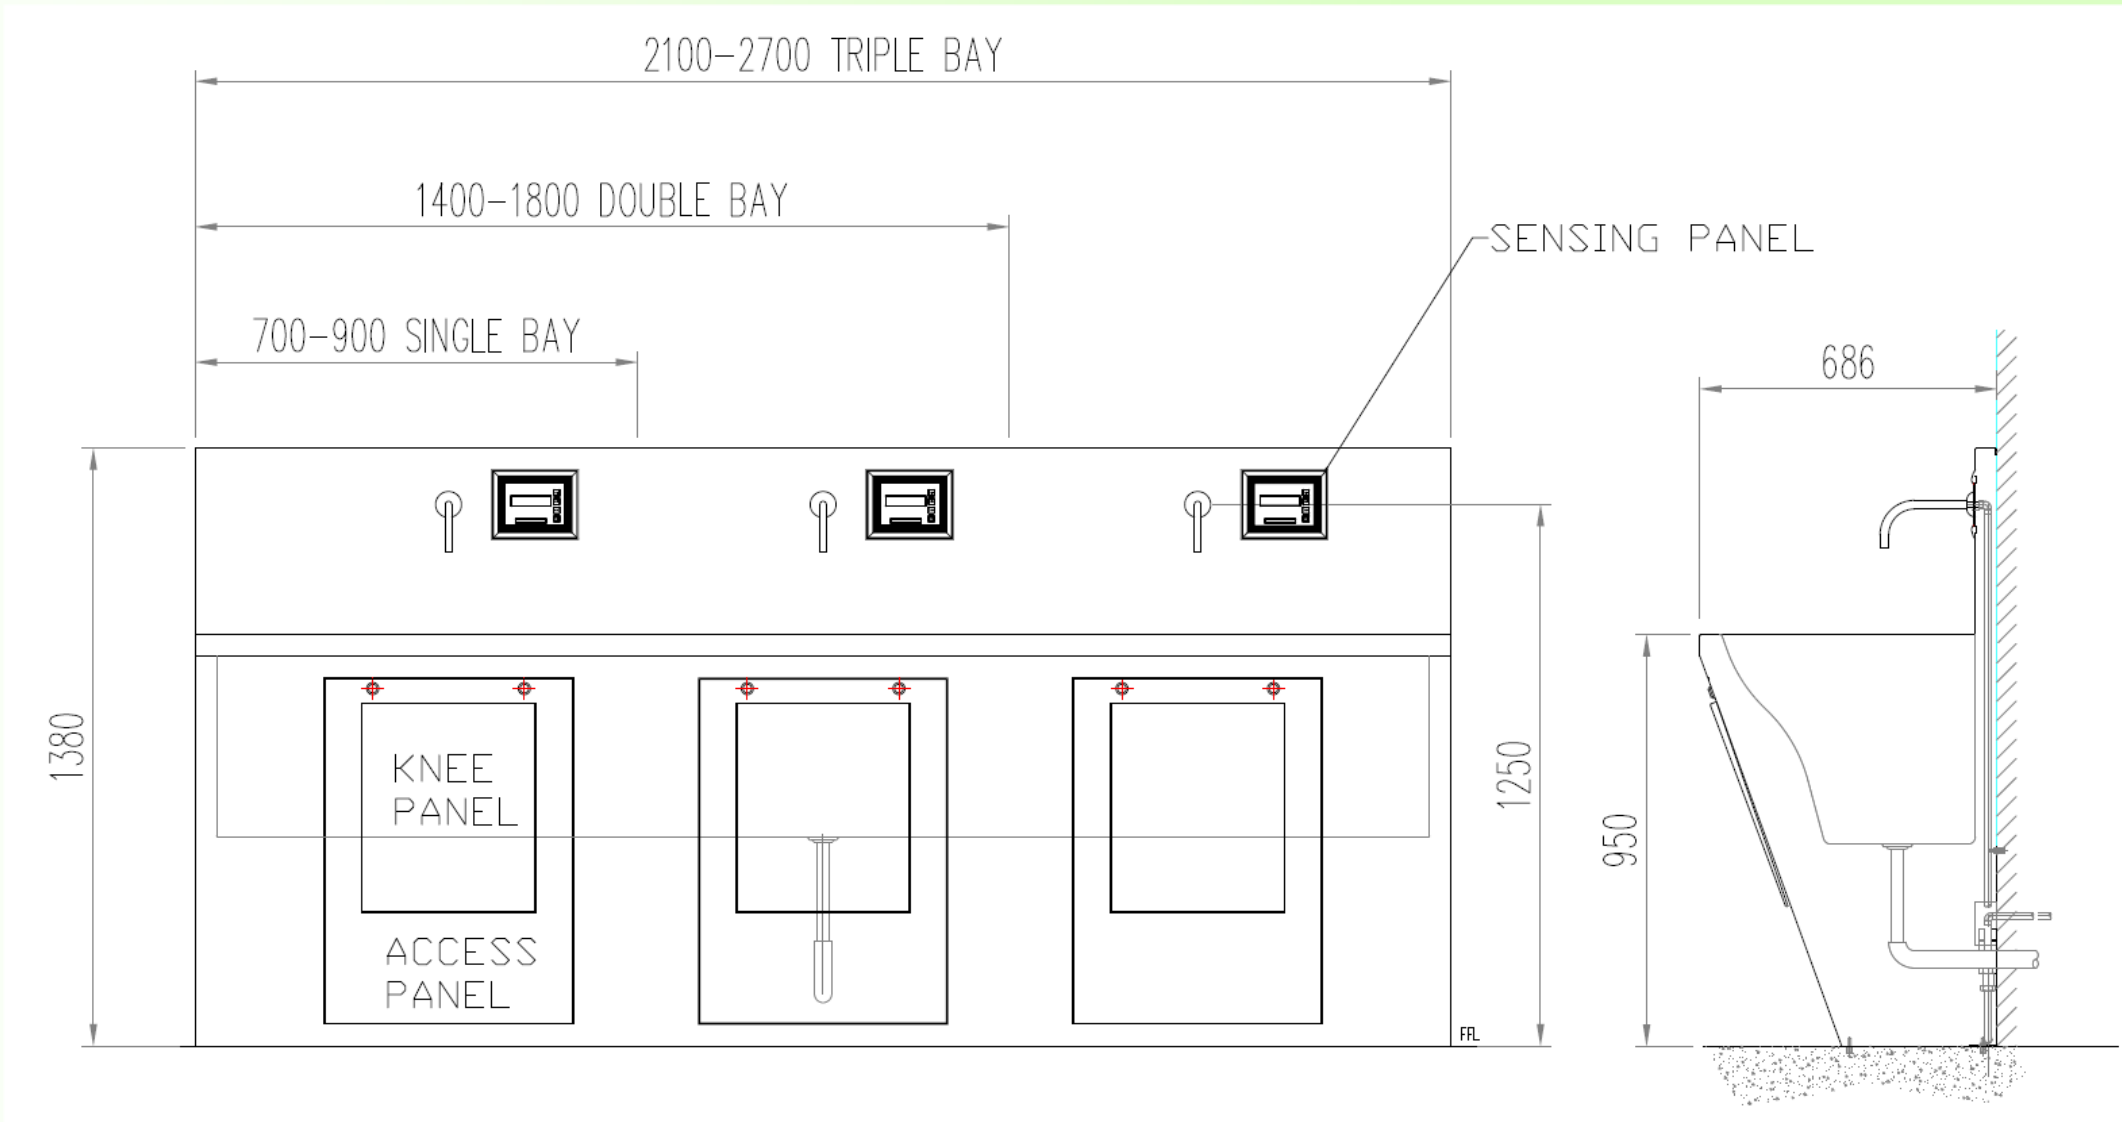

TECHNICAL SPECIFICATION

HTM 03-01/HTM2025 - Ventilation in Healthcare Premises
DIN 4799 - Testing of Air Distribution Systems Serving OT
HTM 2007 - Electrical Supply and Services Distribution
HTM 2020/2021 - Electrical Safety codes for High & Low Voltage
ADA Compliant

Designation : WT17000 Surgical Scrub Sink
Dimensions : 700-900mm per bay L x 686mm D x 1380mm H
Material : High grade stainless steel SS304 (*SS316 & Dupont Material is available)
Finishing : Satin polished stainless steel
Mixing : Hot / Cold Water Thermostatic Mixing Valve
Sensing : Sensing PCB with sensor & Time out control 1,3,5&10 min.
Valve : Solenoid Valve for water passage
Water Tap : Chrome body water tap
Bypass : Knee Panel
Power Rating : 240VAC input, 50/60 Hz

MODEL NUMBER

WT17001	Single Bay Fully Automatic Surgical Scrub Sink	WT17011	Single Bay Manual Elbow Operated Surgical Scrub Sink
WT17002	Double Bay Fully Automatic Surgical Scrub Sink	WT17012	Double Bay Manual Elbow Operated Surgical Scrub Sink
WT17003	Triplex Bay Fully Automatic Surgical Scrub Sink	WT17013	Triplex Bay Manual Elbow Operated Surgical Scrub Sink
WT17004	Four Bay Fully Automatic Surgical Scrub Sink	WT17014	Four Bay Manual Elbow Operated Surgical Scrub Sink
WT17005	Five Bay Fully Automatic Surgical Scrub Sink	WT17015	Five Bay Manual Elbow Operated Surgical Scrub Sink
WT17006	Six Bay Fully Automatic Surgical Scrub Sink	WT17016	Six Bay Manual Elbow Operated Surgical Scrub Sink

